PictureMate®
personal photo lab

Using PictureMate
With a Computer

Follow These Easy Steps

To use PictureMate® with your computer, you'll need to:

PictureMate
personal photo lab
Printer Software
See the Using PictureMate With a Computer booklet for installation instructions.
EPSON
Drivers and Utilities for: Microsoft® Windows® 98SE, Me, 2000, XP, Apple® Macintosh® OS X 10.2 to 10.3
Additional Software: Epson Software™ Film Factory™ and PictureMate User's Guide

Install the software on your computer from the PictureMate CD.

Follow the steps in this booklet.

Connect PictureMate to your computer.

The steps in this booklet tell you how and when to connect.

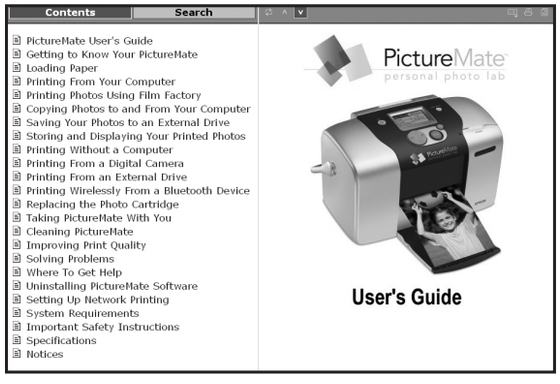

View the on-screen *User's Guide*.

Click PictureMate User's Guide right on your computer screen for steps on using PictureMate with your computer. It's your comprehensive guide to PictureMate.

Installing Software and Connecting PictureMate

To connect PictureMate® you'll need this cable:



Type A to B
USB cable

If you don't have a USB cable, you can buy one from your local computer dealer or from Epson.® See the inside back cover for details.

When you're ready to start, see the section for your computer system:

- For Windows,® see below.
- For Macintosh,® see page 9.

Installing PictureMate for Windows

First make sure PictureMate is **NOT CONNECTED** to your computer, and **REMOVE** your memory card, if it's inserted. Then:

1. Press the ⏻ On button to turn on PictureMate.
2. Turn on your computer.
3. Wait a minute for your computer to start up, then insert the PictureMate CD in your CD-ROM or DVD drive.

   Note:
   If you have any problems installing the PictureMate software, see page 16.

After a moment, you see this screen:

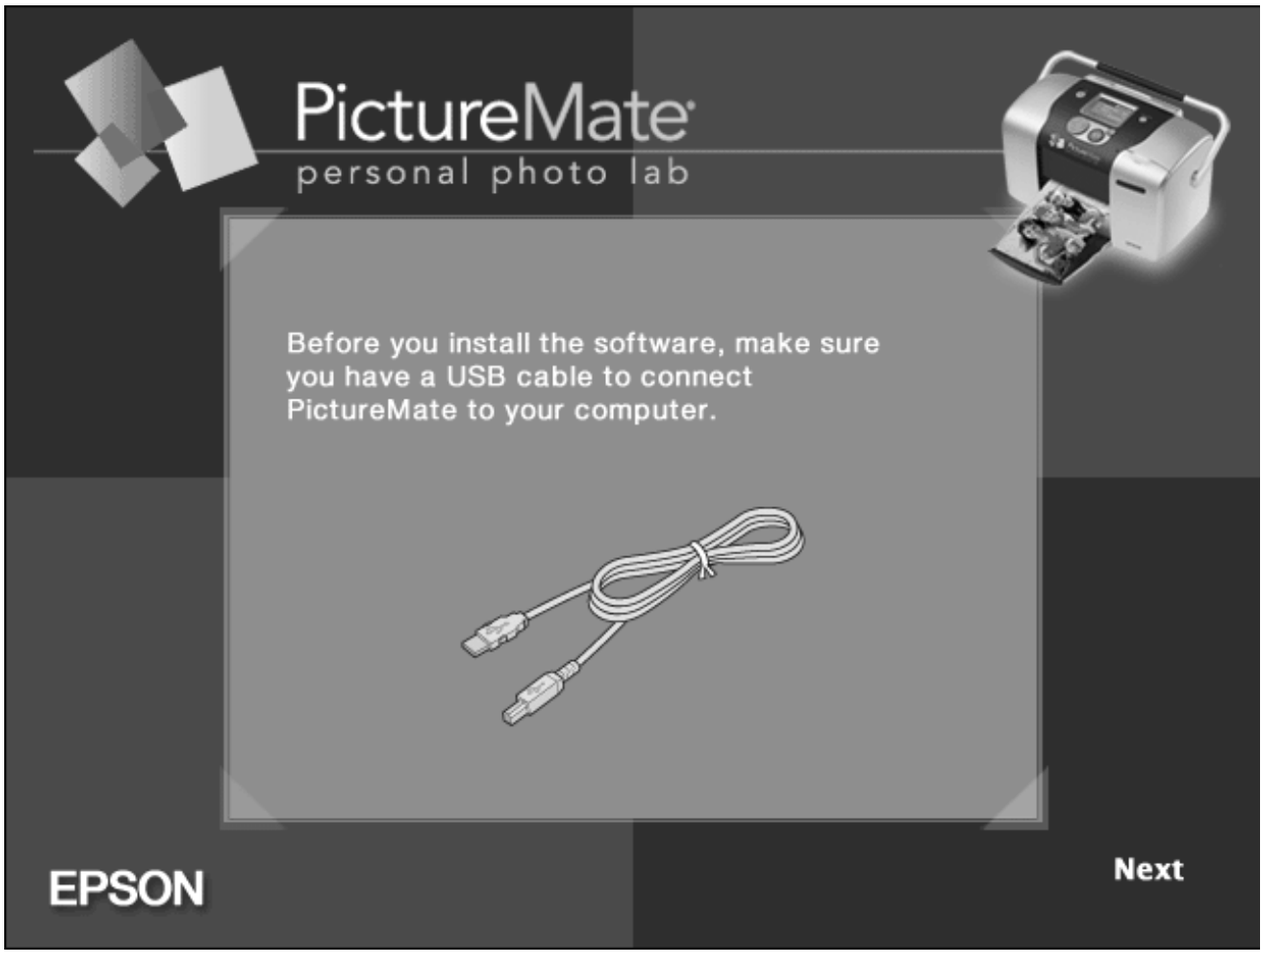
PictureMate
personal photo lab
Before you install the software, make sure you have a USB cable to connect PictureMate to your computer.
EPSON
Next

4. Click **Next**.

Note:
If you see a screen like this, remove your memory card from PictureMate and click the **X** in the upper right corner to close the screen, if necessary.

EPSON_DSC (G:)
Windows can perform the same action each time you insert a disk or connect a device with this kind of file:
Pictures
What do you want Windows to do?
Copy pictures to a folder on my computer using Microsoft Scanner and Camera Wizard
View a slideshow of the images using Windows Picture and Fax Viewer
Print the pictures using Photo Printing Wizard
Startup CardMonitor using EPSON CardMonitor1.1
Open folder to view files
Always do the selected action.
OK
Cancel

Note:
If you see a New Hardware Found message at the bottom of your screen, click the **X** in the box to close it.

If you see a screen like this, click **Cancel** and disconnect PictureMate from your computer. Then turn off your computer and begin again at step 2.

Found New Hardware Wizard
Welcome to the Found New Hardware Wizard
Windows will search for current and updated software by looking on your computer, on the hardware installation CD, or on the Windows Update Web site (with your permission).
Read our privacy policy
Can Windows connect to Windows Update to search for software?
Yes, this time only
Yes, now and every time I connect a device
No, not this time
Click Next to continue.
< Back
Next >
Cancel

5. When you see this screen, read the license agreement and click AGREE.

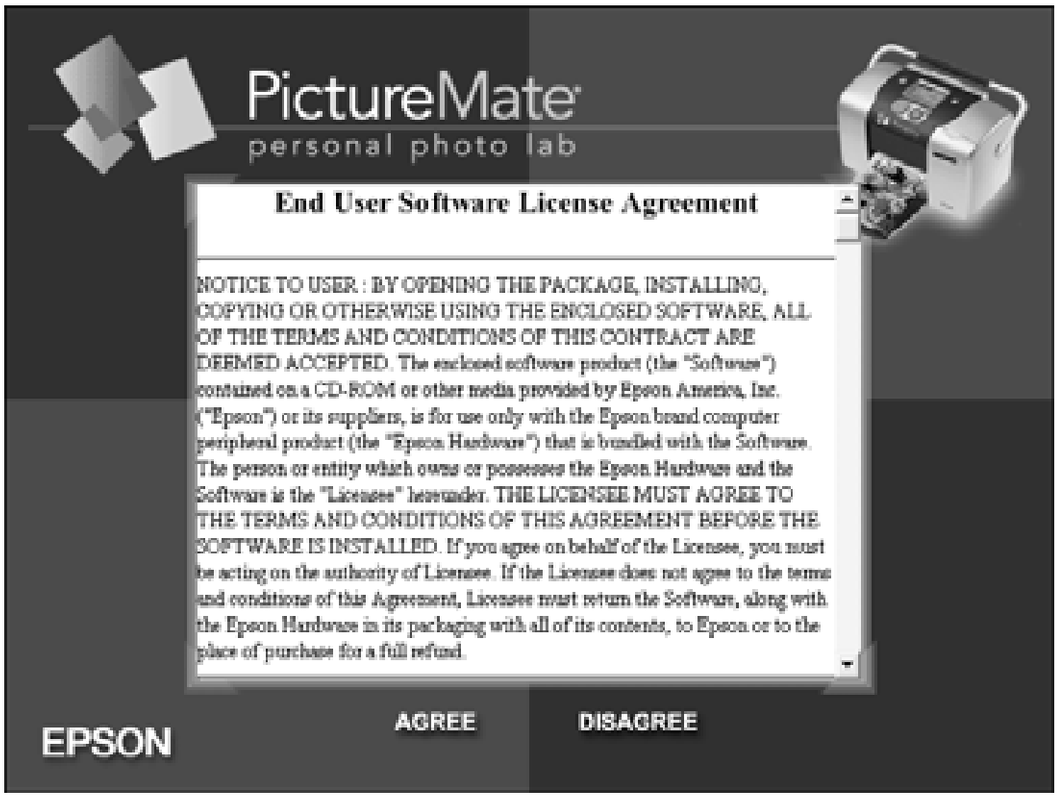
PictureMate
personal photo lab
End User Software License Agreement
NOTICE TO USER : BY OPENING THE PACKAGE, INSTALLING, COPYING OR OTHERWISE USING THE ENCLOSED SOFTWARE, ALL OF THE TERMS AND CONDITIONS OF THIS CONTRACT ARE DEEMED ACCEPTED. The enclosed software product (the "Software") contained on a CD-ROM or other media provided by Epson America, Inc. ("Epson") or its suppliers, is for use only with the Epson brand computer peripheral product (the "Epson Hardware") that is bundled with the Software. The person or entity which owns or possesses the Epson Hardware and the Software is the "Licensee" hereunder. THE LICENSEE MUST AGREE TO THE TERMS AND CONDITIONS OF THIS AGREEMENT BEFORE THE SOFTWARE IS INSTALLED. If you agree on behalf of the Licensee, you must be acting on the authority of Licensee. If the Licensee does not agree to the terms and conditions of this Agreement, Licensee must return the Software, along with the Epson Hardware in its packaging with all of its contents, to Epson or to the place of purchase for a full refund.
EPSON
AGREE
DISAGREE

You see this message:

Printer Driver Not Found
Your printer driver is not installed. To use your EPSON printer, click OK to install the printer driver software.
OK
Cancel

6. Click OK to begin installing your software.

After a moment, you see this screen:

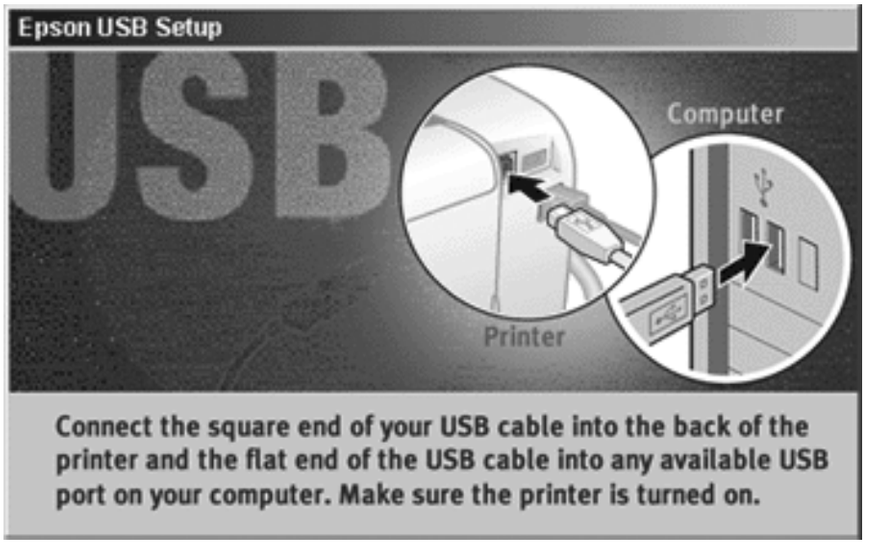
Epson USB Setup
USB
Computer
Printer
Connect the square end of your USB cable into the back of the printer and the flat end of the USB cable into any available USB port on your computer. Make sure the printer is turned on.

7. Make sure PictureMate is turned on, then connect the square end of your USB cable to the **USB** port on the back of PictureMate. Connect the flat end of the USB cable to any USB port on your computer.

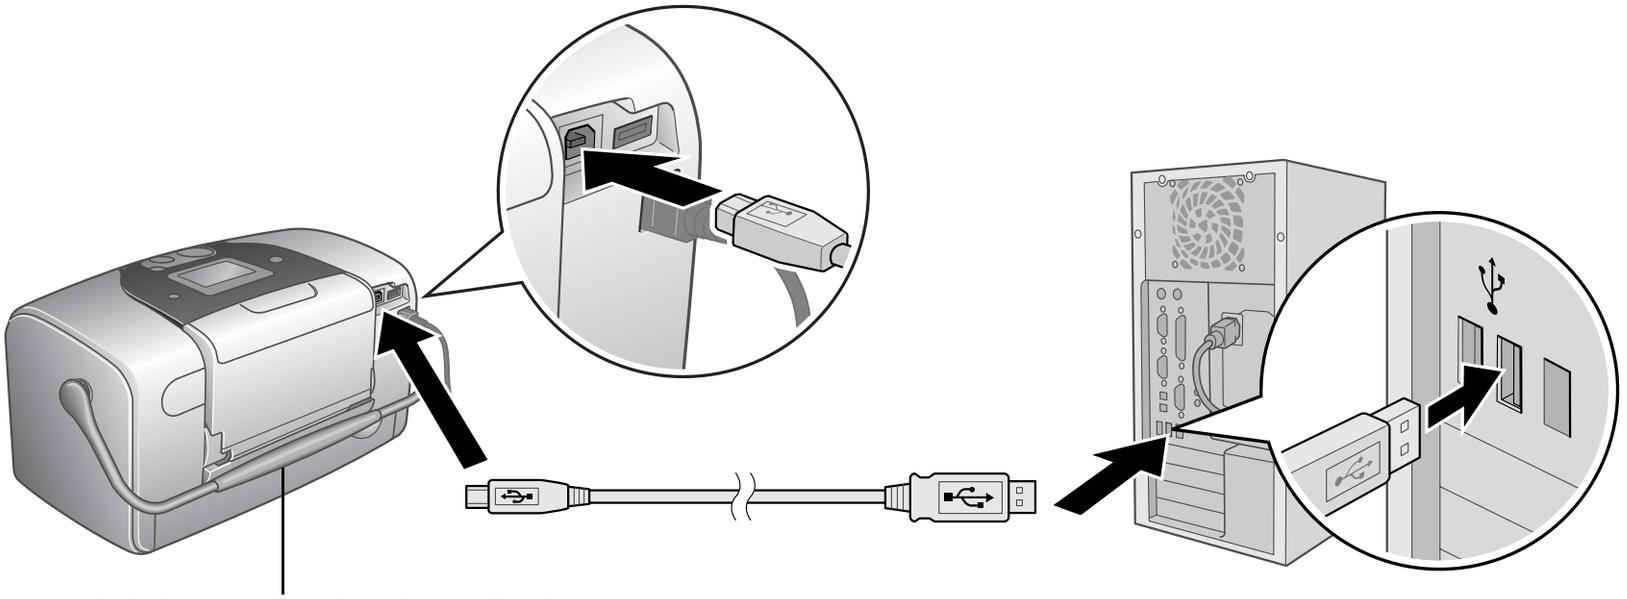

Windows installs your software.

8. When you see this screen, click **No** if you have another printer for non-photo printing.

   If PictureMate is your only printer, and you only print photos, click **Yes**.

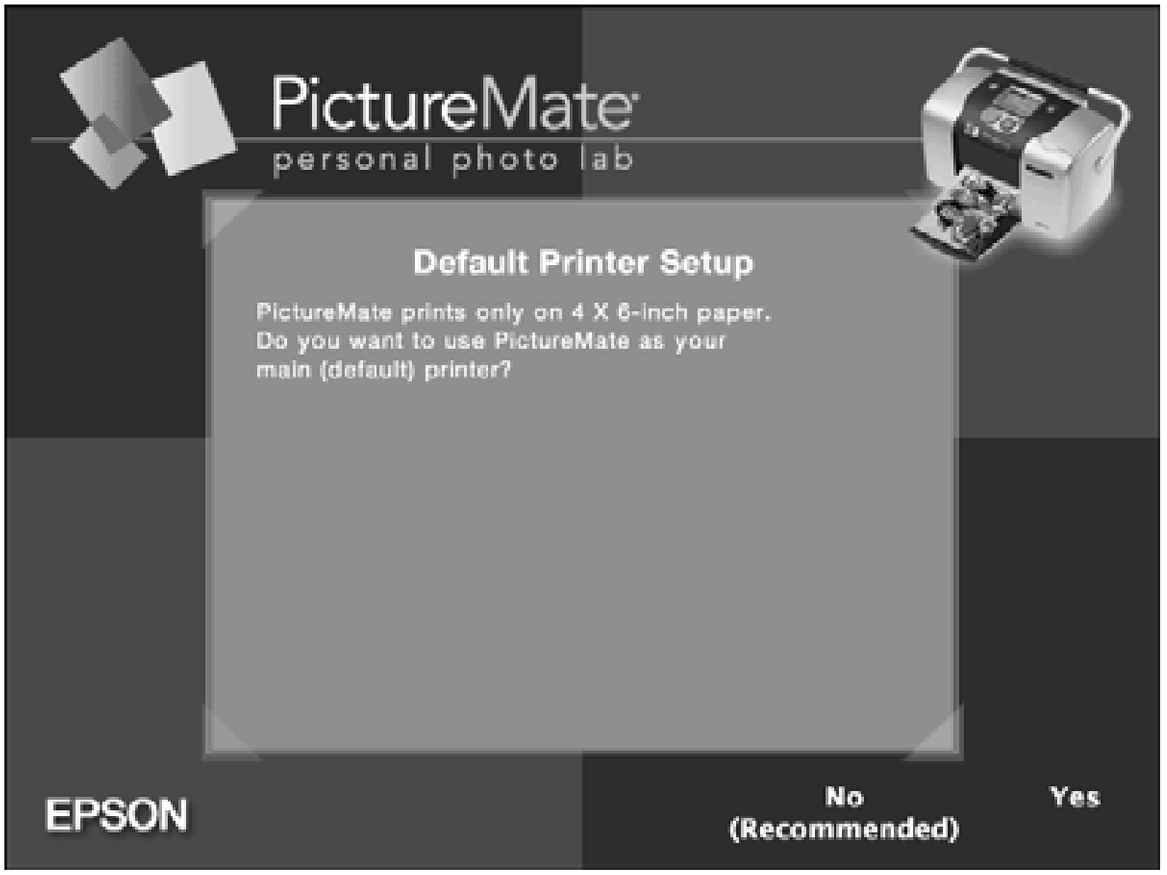

Continue with the instructions in the next section.

Installing Additional Software for Windows

1. When you see a message that your printer driver was successfully installed, click **Next**. Additional software is installed.

   You see the Optional Software screen:

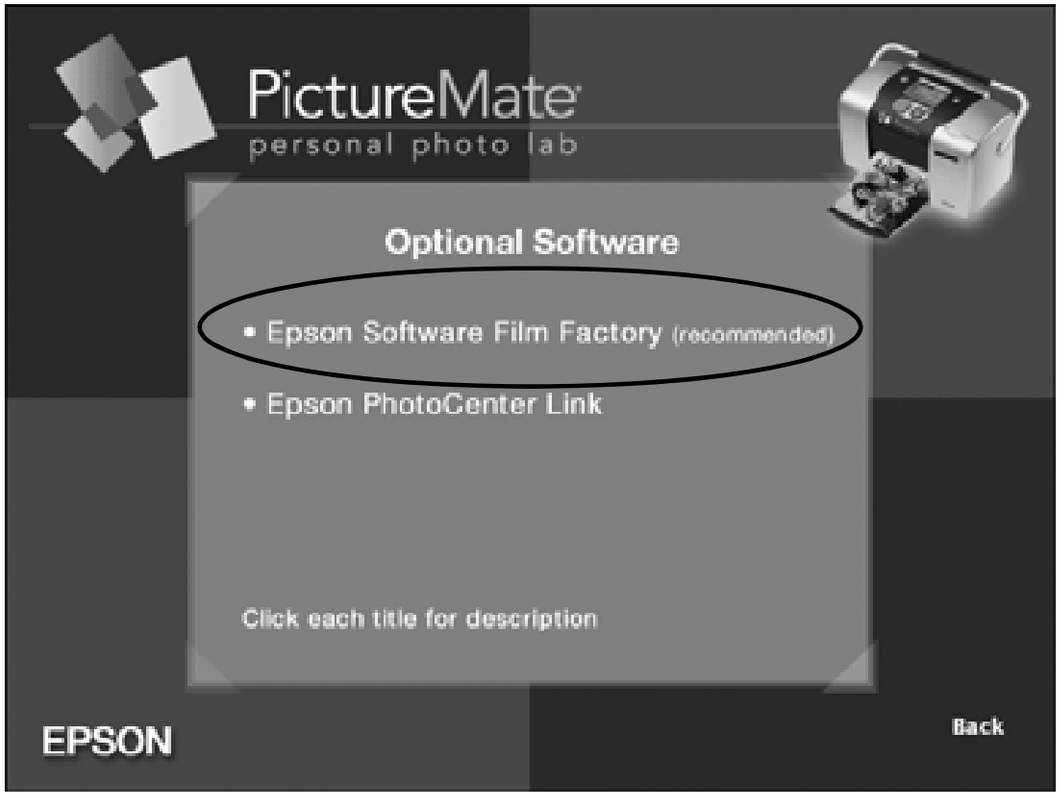

2. Click **Epson Software Film Factory**, then click **Install** on the next screen and follow the on-screen instructions.

   Note:
   If you are asked if you want to install QuickTime,® click **Yes** and follow the on-screen instructions. Uncheck the box for launching Film Factory™ at the end of the installation.

3. Close any open windows to return to the Optional Software screen.
4. Click **Epson PhotoCenter Link**, then click **Add Icon** on the next screen and click **OK**.
5. When you're done installing software, click **Exit**. The registration screen appears.
6. Follow the on-screen instructions to register PictureMate.
7. Remove and store your PictureMate CD, then restart your computer.

You're ready to print your photos! Insert your memory card or open your photo file on your computer, as described in the on-screen *User's Guide*.

Double-click the **PictureMate User's Guide** icon on your screen to open the *User's Guide*.

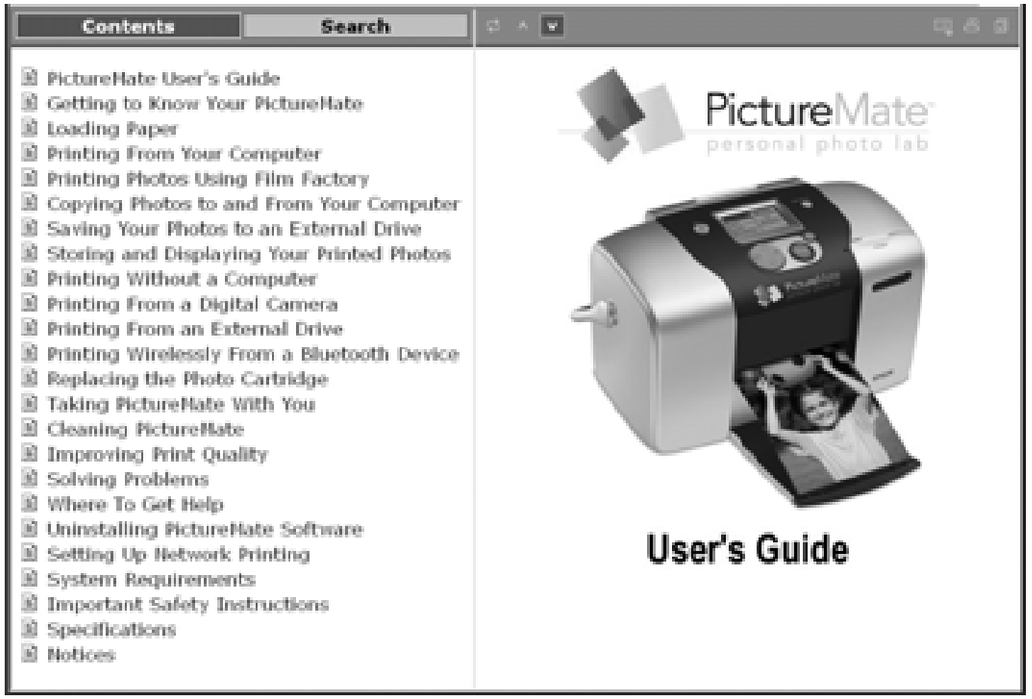

Installing PictureMate for Macintosh

1. If you inserted a memory card, remove it from PictureMate.
2. Connect the square end of your USB cable to the USB port on the back of PictureMate. Then connect the flat end of the USB cable to any open USB port on your Macintosh.

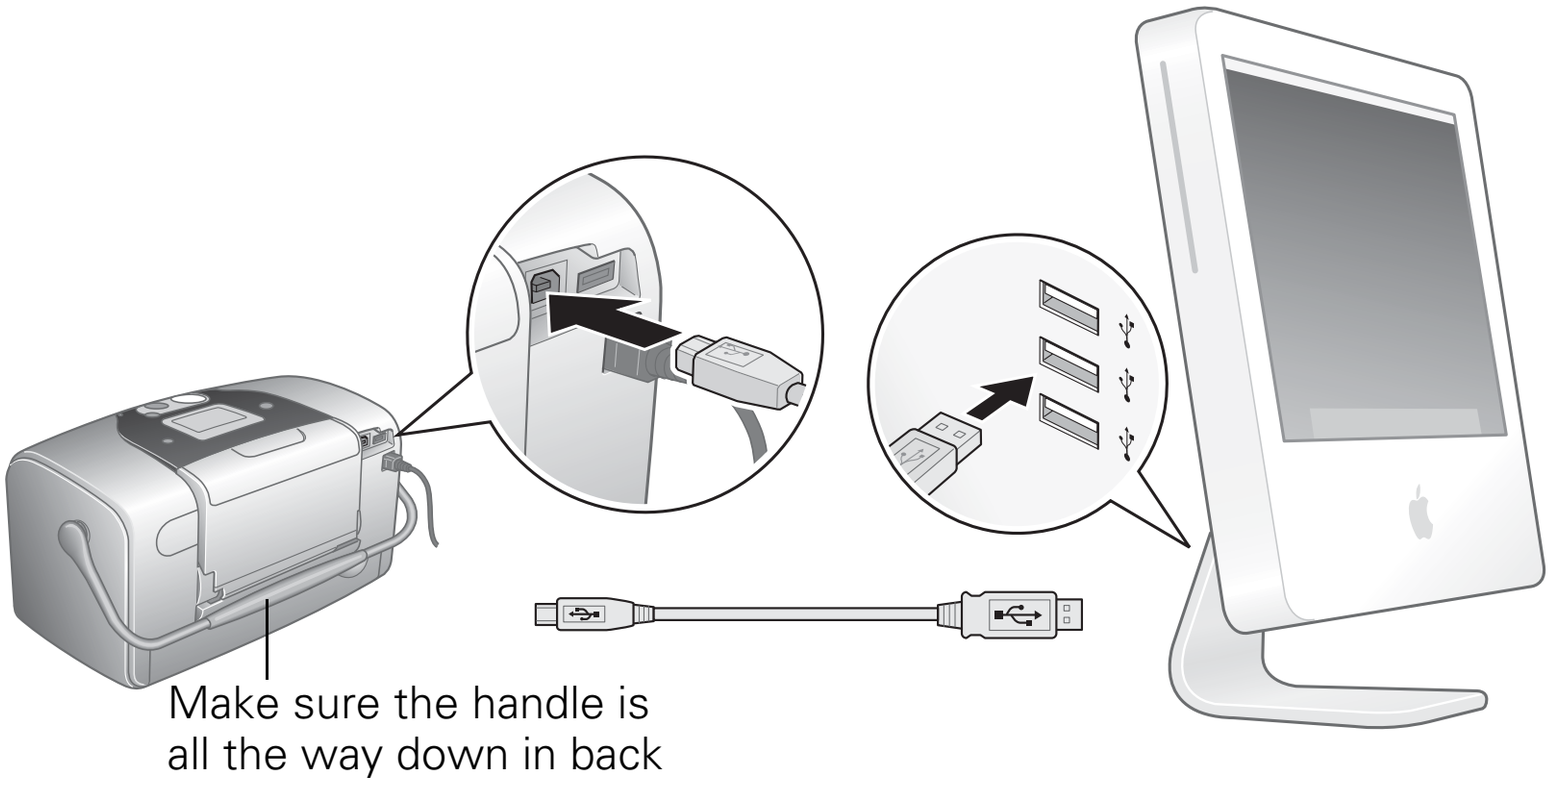

3. Press the ⏻ On button to turn on PictureMate.
4. Turn on your Macintosh and wait a minute for it to start up.
5. Insert the PictureMate CD in your CD-ROM or DVD drive.

Note:
If you have any problems installing the PictureMate software, see page 16.

6. Double-click the Epson CD icon to open it, then double-click Epson. You see a screen reminding you to connect PictureMate to your Macintosh.
7. Click Next.
8. When you see this screen, read the license agreement and click AGREE.

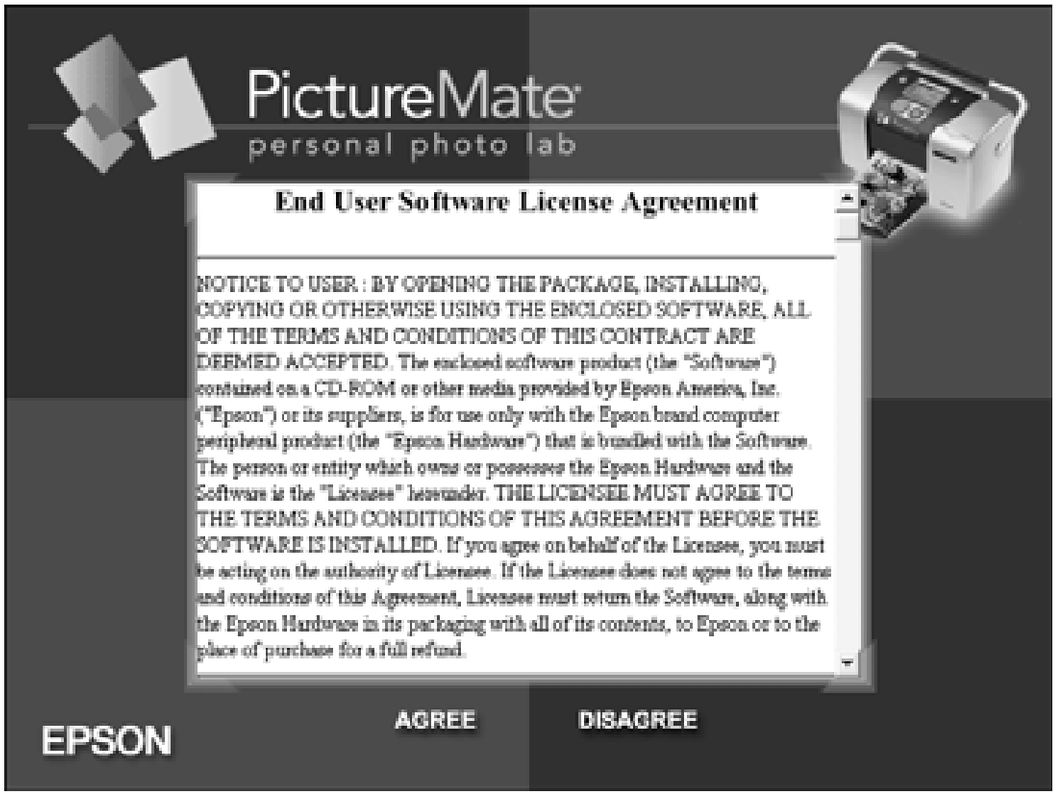
PictureMate
personal photo lab
End User Software License Agreement
NOTICE TO USER: BY OPENING THE PACKAGE, INSTALLING, COPYING OR OTHERWISE USING THE ENCLOSED SOFTWARE, ALL OF THE TERMS AND CONDITIONS OF THIS CONTRACT ARE DEEMED ACCEPTED. The enclosed software product (the "Software") contained on a CD-ROM or other media provided by Epson America, Inc. ("Epson") or its suppliers, is for use only with the Epson brand computer peripheral product (the "Epson Hardware") that is bundled with the Software. The person or entity which owns or possesses the Epson Hardware and the Software is the "Licensee" hereunder. THE LICENSEE MUST AGREE TO THE TERMS AND CONDITIONS OF THIS AGREEMENT BEFORE THE SOFTWARE IS INSTALLED. If you agree on behalf of the Licensee, you must be acting on the authority of Licensee. If the Licensee does not agree to the terms and conditions of this Agreement, Licensee must return the Software, along with the Epson Hardware in its packaging with all of its contents, to Epson or to the place of purchase for a full refund.
EPSON
AGREE
DISAGREE

You see the Install Menu:

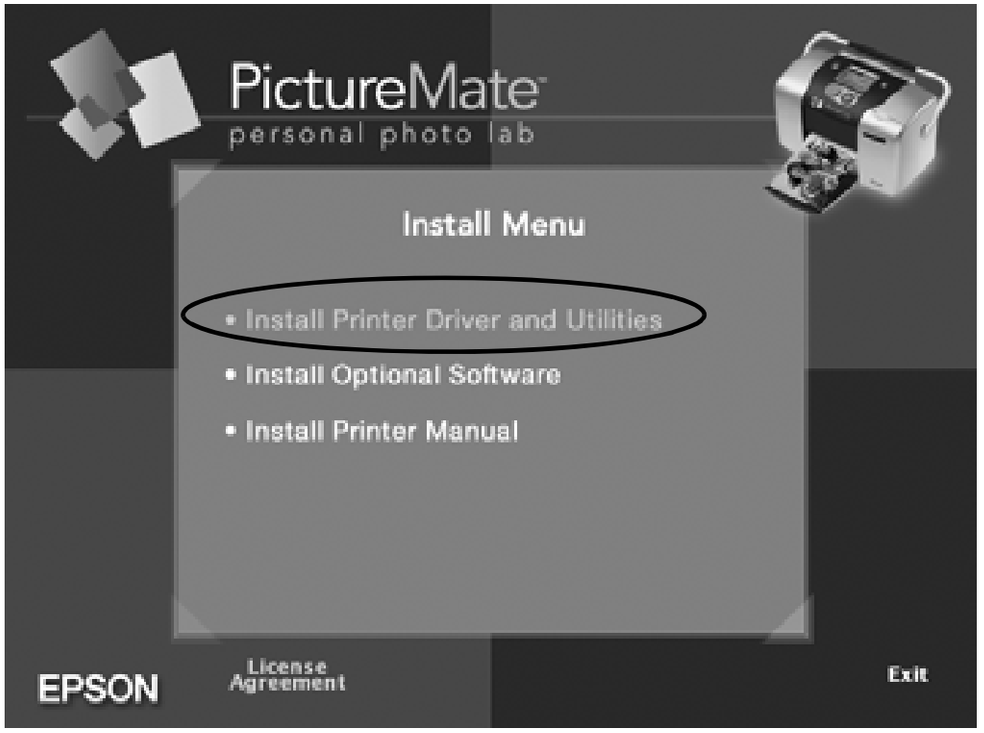

9. Click **Install Printer Driver and Utilities**. Follow the on-screen instructions to install several programs.

   You'll need to enter your password, accept license agreements, and click **Quit** several times as you install.

10. Continue with the instructions in the next section to install additional software.

Installing Additional Software for Macintosh

1. When you return to the Install Menu, click Install Optional Software. You see this menu:

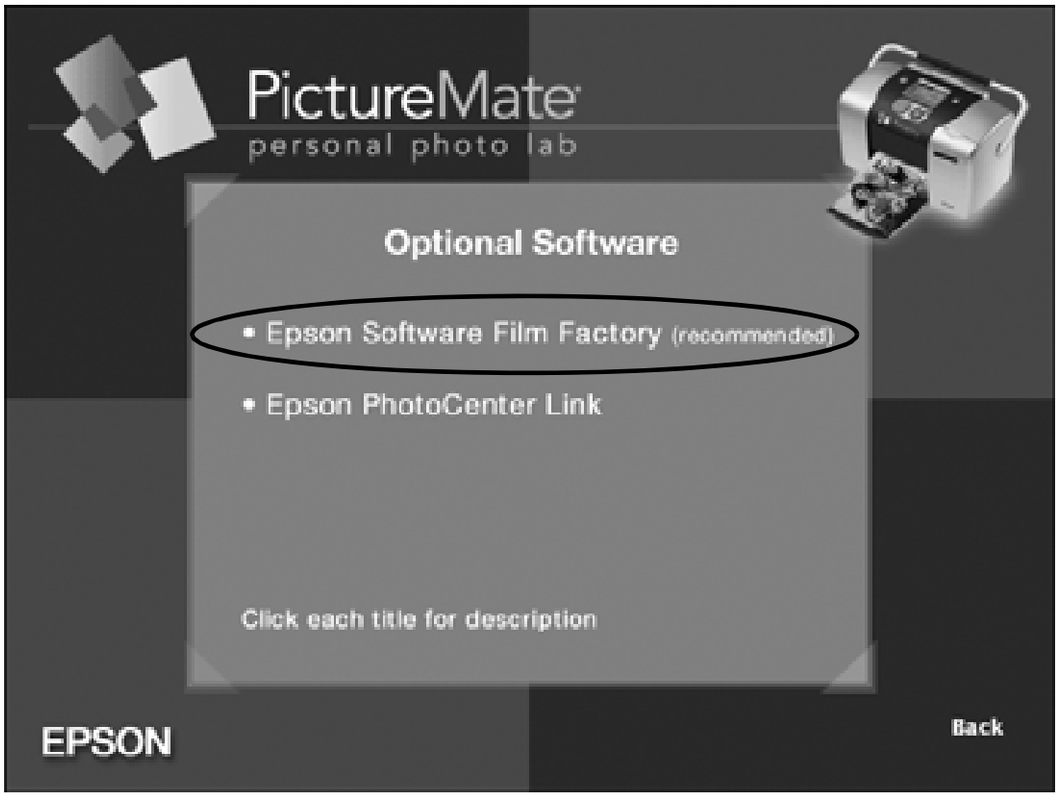

2. Click Epson Software Film Factory, then click Install on the next screen and follow the on-screen instructions.
3. Click Epson PhotoCenter Link, then click Add Icon on the next screen and click OK.
4. When you return to the Optional Software menu shown above, click Back.

5. At the Install Menu, click **Install Printer Manual** to install your on-screen *User's Guide*.
6. When you're done installing software, click **Exit**. The registration screen appears.
7. Follow the on-screen instructions to register PictureMate.
8. Remove and store your PictureMate CD, then restart your Macintosh.

After you finish installing software, you must select PictureMate as your Macintosh printer. Follow the instructions below.

Selecting Your Printer in Mac OS X

1. Open the **Applications** folder, then open the **Utilities** folder and double-click **Printer Setup Utility** (OS X 10.3.x) or **Print Center** (OS X 10.2.x).

Note:
If you see this screen, click **Add** and go to step 3.

If you see this screen, click **OK** and go to step 3.

2. If PictureMate 2005 appears in the Printer List, click PictureMate 2005 and click Add.

   If it doesn't appear, make sure PictureMate is turned on and connected to your Macintosh, then click Add. You see a new screen:

3. If it isn't already selected at the top of the screen, choose EPSON USB.
4. Click PictureMate 2005, then click the Add button.

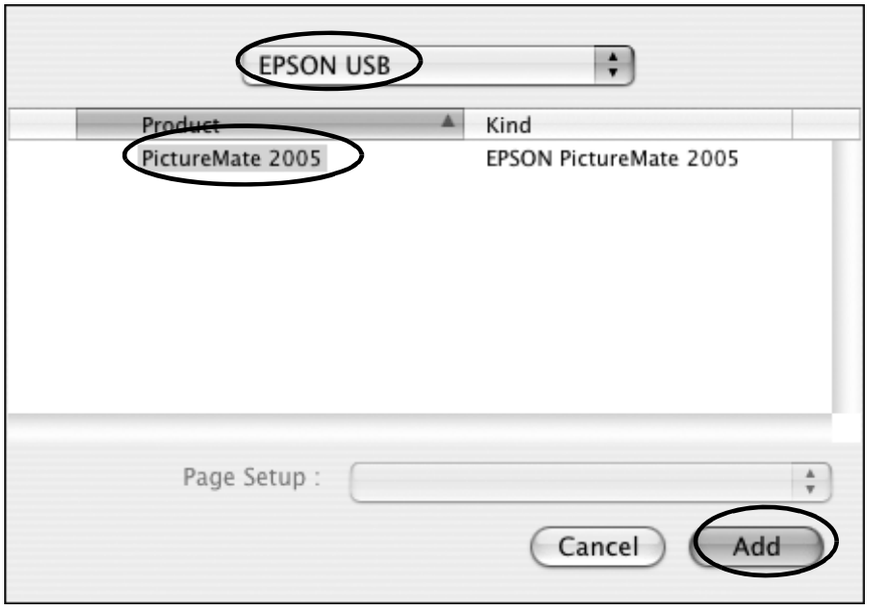

   You see the Printer List with PictureMate 2005 added:

5. Close the Printer Setup Utility or Print Center.

You're ready to print your photos! Insert your memory card or open your photo file on your Macintosh, as described in the on-screen *User's Guide*.

Double-click the PictureMate User's Guide icon on your screen to open the *User's Guide*.

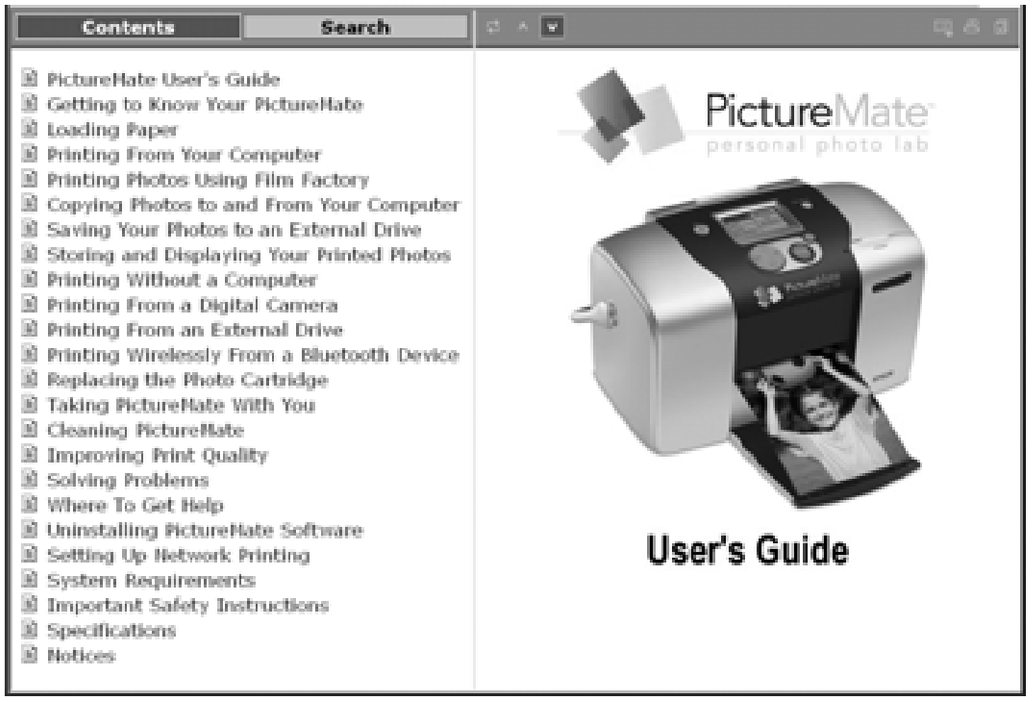

Help With Software Installation Problems

If you have problems installing the software, try these suggestions:

- Carefully follow the instructions on the *Start Here* sheet and in this booklet. Don't connect PictureMate to your computer until you are instructed to. Then connect the USB cable securely at both ends.
- Close your other programs, including any screen savers and virus protection software, and install the PictureMate software again.
- If you're installing the software for Windows, make sure Windows 98, Me, 2000, or XP was preinstalled on your system. The USB Printer Device Driver may not install correctly if you've upgraded from Windows 95.
- On a Macintosh, if you don't see PictureMate 2005 in the Format for menu under Page Setup, you may need to set up PictureMate in the Printer Setup Utility or Print Center. See page 13 for instructions.
- If you're printing over a network, see your on-screen *User's Guide*.

Epson and PictureMate are registered trademarks of Seiko Epson Corporation.

Epson Store and Epson PhotoCenter are service marks and Epson Software is a trademark of Epson America, Inc.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

© 2005 Epson America, Inc. 5/05 CPD-19730

Where To Get Help

If you need additional help with PictureMate, see “Where To Get Help” in the *Using PictureMate Without a Computer* book.

PictureMate Accessories

You can purchase a PictureMate Print Pack (with PictureMate Photo Paper and a PictureMate Photo Cartridge), a USB cable, and other PictureMate accessories from an authorized Epson dealer. To find the nearest dealer, please call 800-GO-EPSON (800-463-7766). To purchase online, visit www.epsonstore.com (U.S. sales only). In Canada, please call (800) 463-7766 for dealer referral.